

HUO 510

Boot wiring list

Indicators left LI, right RI

Stop and tail combined left LCS, LCT, right RCS, RCT

Single Stop S

Single Tail T

Boot light BL

Junction boxes: J1, 6 terminal, J2, 4 terminal

Boot light switch SW1, 2 terminal

Common return -24v (battery)

Indicators

- LI+ > J1.1, LI- > J1.2
- RI+ > J1.3, RI- > J1.2

Stop and tail combined

- LCS+ > J1.6, LCS- > J1.4
- LCT+ > J1.5, LCT- > J1.4
- RCT+ > J2.3, RCT- > J2.2
- RCS+ > J2.1, RCS- > J2.2

Stop

- S+ > J2.1, S- > J2.2

Tail

- T+ > J2.3, T- > J2.2

Boot light

- BL+ > J2.4, BL- > SW1.1

Link J1.2 > J1.4 > J2.2 -24v (common return)

Junction box and boot light switch wiring list

J1

- J1.1 > LI+
- J1.2 > LI- RI- SW1.2 J1.4
- J1.3 > RI+
- J1.4 > LCS- LCT- RCT- J2.2
- J1.5 > LCT+ J2.3
- J1.6 > LCS+ J2.1

J2

- J2.1 > RCS+ S+
- J2.2 > RCS- RCT- S- T- J1.4
- J2.3 > T+ RCT+ J1.5
- J2.4 > BL+ (+24v)

SW1

SW1.1 > BL-

SW1.2 > J1.2