


HUO 510 - Cab wiring diagram

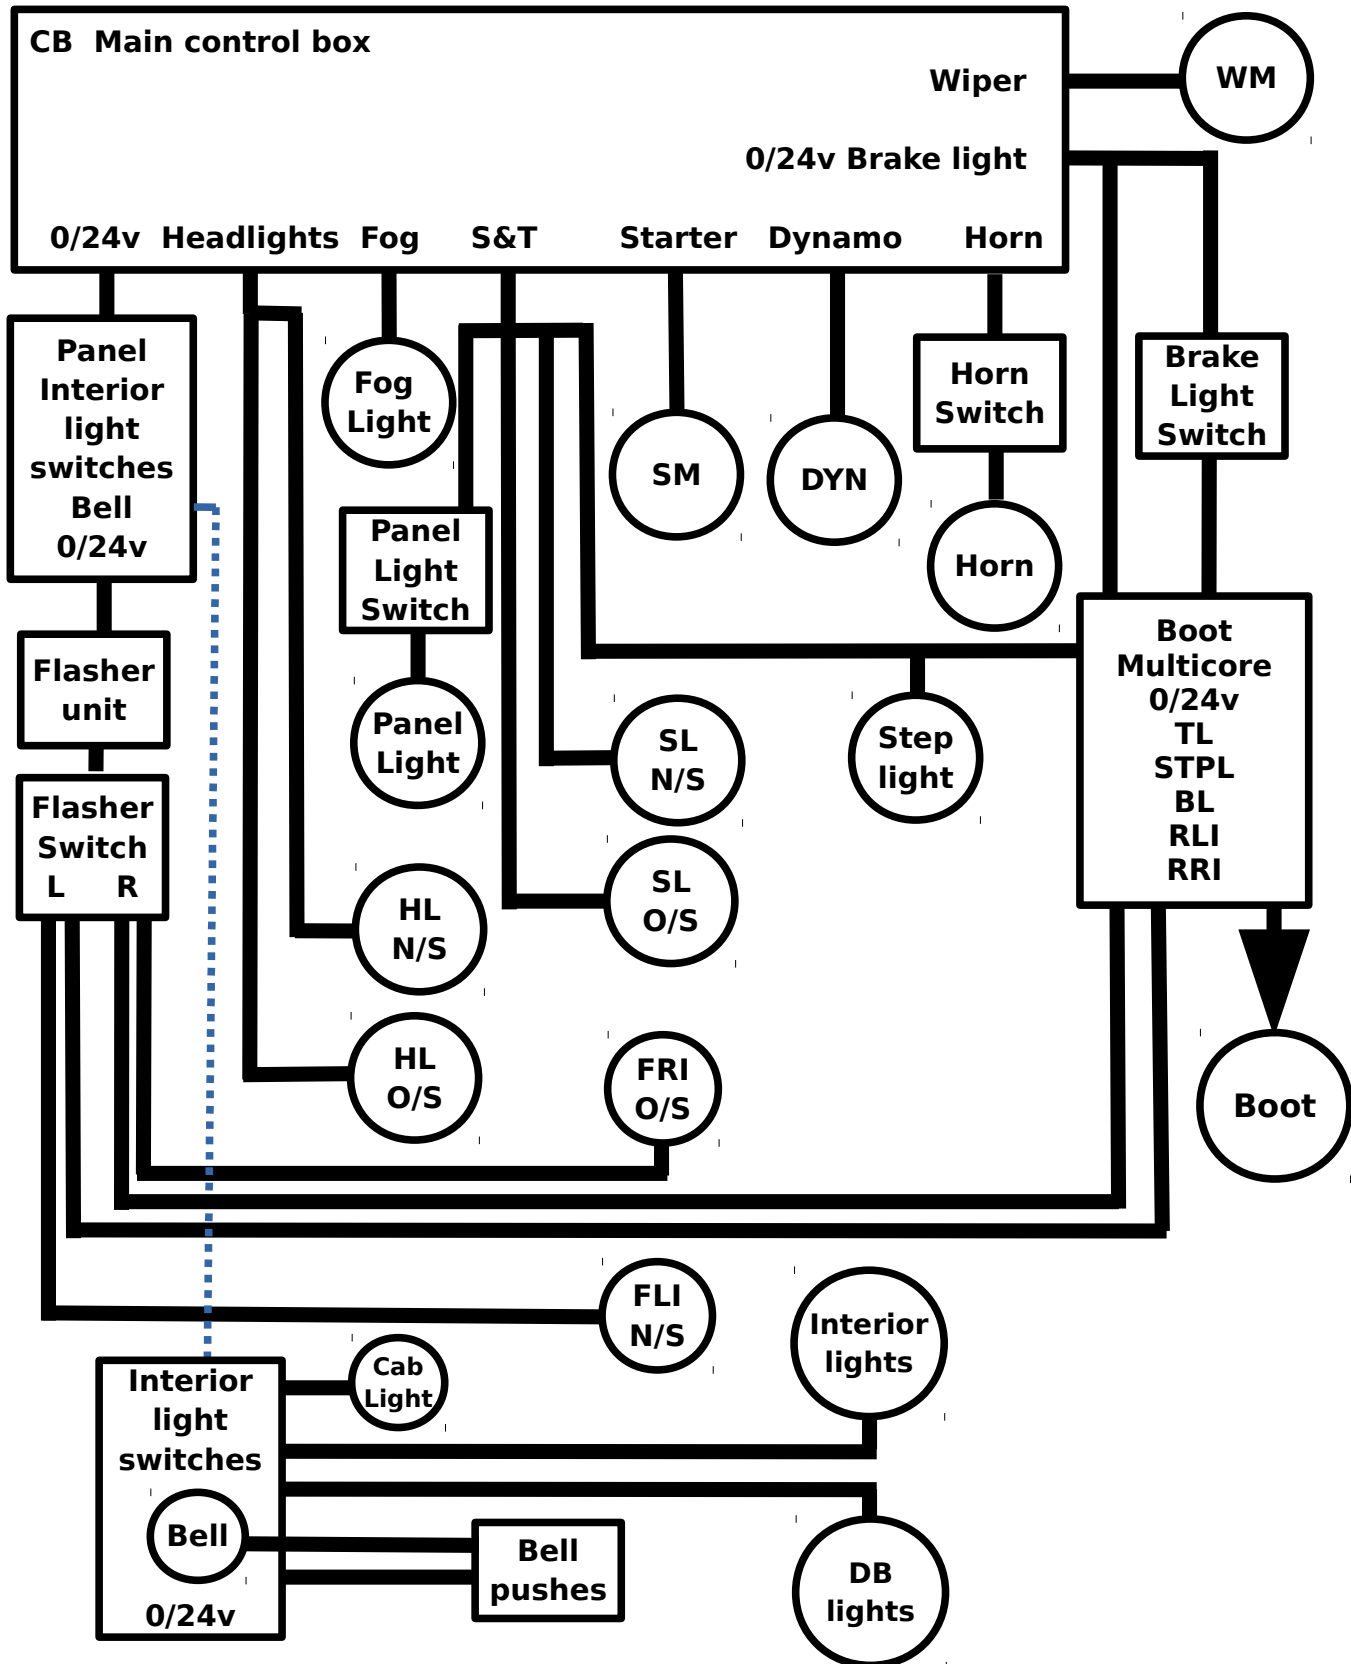

Key to diagram

STPL – stop(brake) light

BL – boot light

HL - headlight

SL – sidelight

RLI – rear left indicator

RRI – rear right indicator

FLI – front left indicator light

FRI – front right indicator light

SM – starter motor

WM – wiper motor unit (switch combined)

DYN – dynamo

DB – Destination box

Notes

0v and 24v carried to boot in multicore.

Junction box required below cab for indicator feed to boot and stop light switch to boot via multicore.